



Lenovo 100s Chromebook-11IBY Speaker Replacement Speakers Replacement

This guide will show how to remove and replace the speakers for the Lenovo 100s Chromebook-11IBY.

Written By: Elbert Ballado



INTRODUCTION

This guide will show how to remove the speakers for the Lenovo 100s Chromebook-11IBY. This removal will allow you to replace or upgrade the two speakers for your laptop.



TOOLS:

- [Phillips Size 0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Speakers



- Ensure your device is turned off and unplugged.

Step 2




- Use a #0 Phillips screwdriver to remove the ten 6mm screws from the larger back plate.

Step 3



- Turn your laptop back over, open it, and use the plastic opening tool on the recessed notch to gently pry each side and lift the keyboard plate up.

 Be careful not to pull keyboard plate out immediately because cables are attached.

Step 4




- Locate the two sticker-like connecting wires (for the keyboard and touchpad).
- Carefully unplug the orange circled (keyboard) wire from the keyboard plate.
- Carefully unplug the yellow circled (touchpad) wire from the keyboard plate.

Step 5



- Carefully unplug the cable attached to breadboard

Step 6

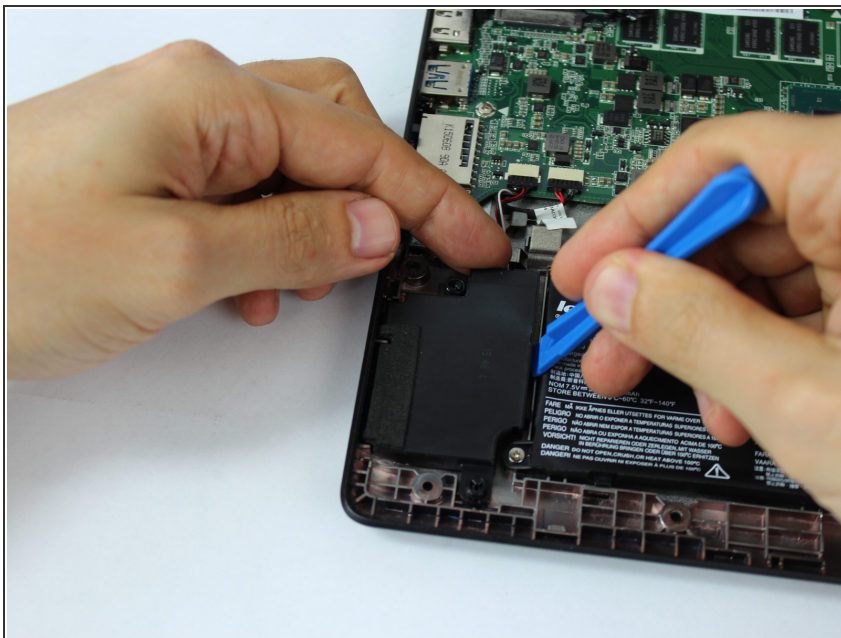

- Pry it up gently.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 10:57:58 PM.